

Quick Setup Guide Flex


AT-25X




WIRING

OPTION 1 Constant ON

AXTON Illuminators have been designed and tested to run 24/7 continuously both indoors and outdoors.

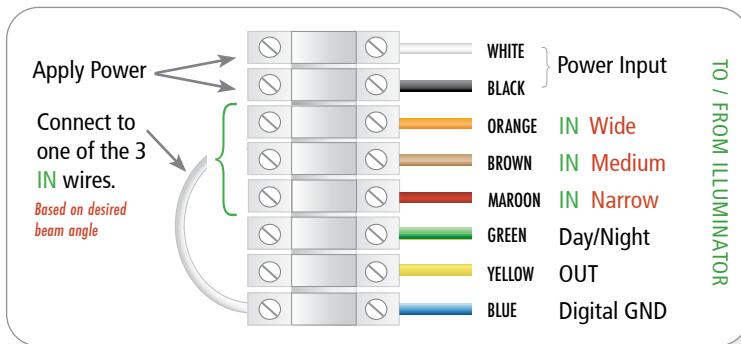


AXTON
ILLUMINATE THE NIGHT

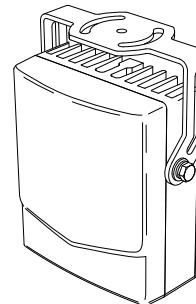

OPTION 2 Automatic

Illuminator will trigger ON/OFF using the built in ambient light sensor which has been pre-set to a threshold of 5-15 lux. ON will trigger immediately while OFF will trigger after a 12-18 second delay.

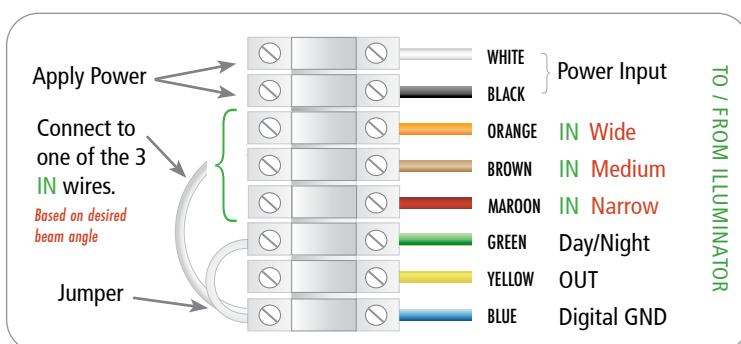

Voltage Input Configurations

24V AC/DC

Polarity NON-Sensitive

Applying voltage other than the required range may cause permanent damage and VOID WARRANTY.




WARNING! Infrared light is not visible. Do not view directly with optical instruments (magnifiers) or stare directly into the illuminator at close distance.

Do not attempt to open or modify the light as this will void the warranty.
If you need a modification, electric or physical, contact us directly. We will let you know if it can be done. All changes **MUST** be made at our factory.



OPTION 3 External Controller (i.e. Camera)

You will need to log into the camera via computer and program the I/O ports to trigger when IR illumination is desired.

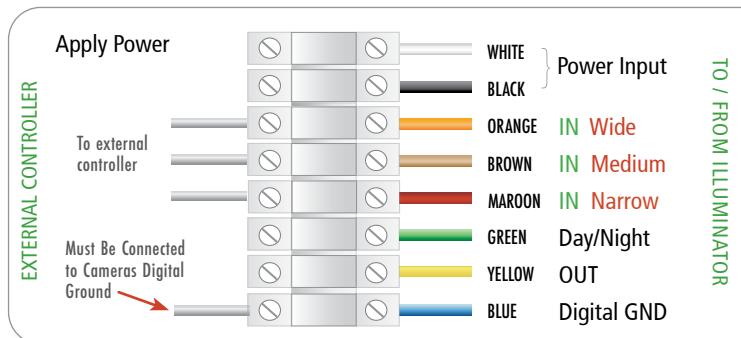

To activate desired angle the corresponding output on the external controller must be set to active low.

Possible external controllers are: computer, motion sensor, door contact sensor and others.



QUESTIONS ? (801) 519-0500 or support@axtontech.com | axtontech.com

AXTON

801 Robinson Drive, Suite #500, North Salt Lake, UT 84054

801/519-0500 sales@axtontech.com

©AXTON 2026.A

