

# Quick Setup Guide **Tactical IR**


## AT-3T-LE



### Installation


#### Install at least 12" from Camera

For optimal performance each illuminator should be at least 12 inches away from any ceiling mounted camera to prevent light from going directly into camera.

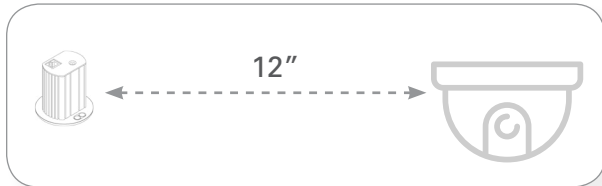

1. Using a hole saw make a 2 1/8" installation hole.

2. Install metal clips (provided) onto opposite sides of the hole.

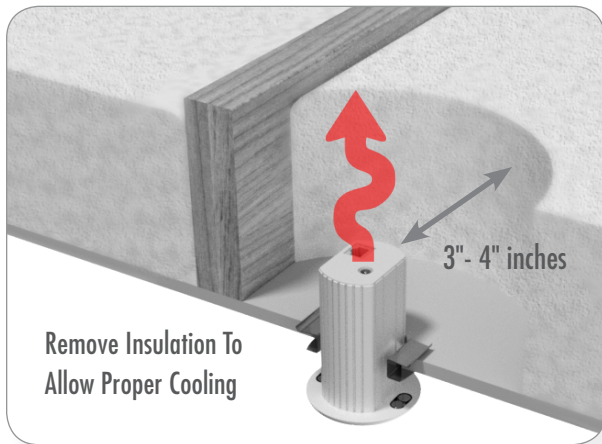

3. Remove at least 3" of insulation around the light to allow proper cooling. *If necessary use a recessed light draft stop cover.*

4. Plug in power cord or PoE cable illuminator should turn ON.

#### POWER

**12 Volts DC**


OR

**PoE**

Applying voltage other than the required range may cause permanent damage and VOID WARRANTY.



Ceiling height affects illumination coverage, higher ceilings allow for wider coverage.

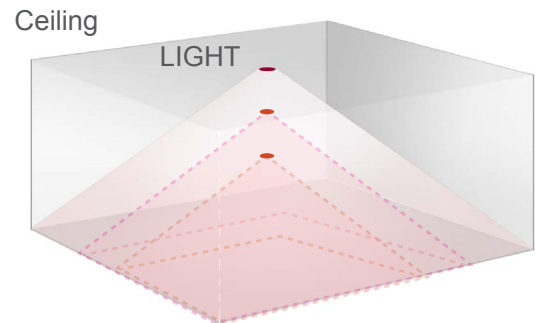

9 ft Ceiling 3LE- 47' x 47'	12 ft Ceiling 3LE- 63' x 63'	20 ft Ceiling 3LE- 105' x 105'
--------------------------------	---------------------------------	-----------------------------------



**WARNING!** Infrared light is not visible. Do not view directly with optical instruments (magnifiers) or stare directly into the illuminator at close distance

**Do not attempt to open or modify the light as this will void the warranty.** If you need a modification, electric or physical, contact us directly. We will let you know if it can be done. All changes **MUST** be made at our factory.



QUESTIONS ? **(801) 519-0500** or [support@axtontech.com](mailto:support@axtontech.com) | [www.axtontech.com](http://www.axtontech.com)



801 West Robinson Drive, Suite 500, North Salt Lake, UT 84054  
☎ 801/519-0500 📠 801/519-0501 ✉ sales@axtontech.com

